

The Great Lakes - St. Lawrence Seaway System Le réseau Grands Lacs - Voie maritime du Saint-Laurent

2017 - NOTICE TO SHIPPING #9

NIAGARA REGION WELLAND CANAL

OPERATION OF BRIDGES 4, 5, 11 & 21

Mariners are reminded of item 5 of the 'Ship Transit & Equipment Requirements' section of the Seaway Handbook. This item refers to 'Bridges – Signal Light System' (page 3). The operation of the system is as follows:

1. When the ship's stem arrives at the WHISTLE sign, the AMBER lights on the CAUTION sign start to flash. This acknowledges that the Operations Control Centre has seen the ship and will commence the bridge raising operation. The Master shall signal the operations controller if he does not receive a FLASHING AMBER by the time the vessel's stem is at the whistle sign.

NOTE: At this time, the **RED BRIDGE NAVIGATION** light will be displayed on the bridge span.

- 2. After the Bridge Operator acknowledges the presence of the ship at the **WHISTLE** sign, he will commence the bridge raising operation. When the bridge starts to rise, the **RED BRIDGE NAVIGATION** lights will commence flashing.
- 3. When the vessel's stem is abeam of the CAUTION sign and the GREEN BRIDGE NAVIGATION lights are displayed, the vessel is allowed to proceed through the bridge draw. If, however, the GREEN BRIDGE NAVIGATION lights are not displayed at the time the stem of the vessel is abeam of the CAUTION sign, the master should take any action necessary to ensure that the vessel does not pass the L/A sign before the bridge span is fully raised and the GREEN BRIDGE NAVIGATION lights are displayed.

NOTE: Under normal conditions the bridge span should be fully raised and displaying a **GREEN NAVIGATION** light by the time the vessel reaches the **CAUTION** sign.

July 24, 2017

Glenn Rutherford Process Support Coordinator - Canal Services St.Catharines Ontario

Tél: (450) 672-4115 Fax: (450) 672-8493